


386 COUPLER POCKET
Brass Casting
1 Required



387 PILOT BRACE
Brass
2 Required (1 as shown - 1 opposite)

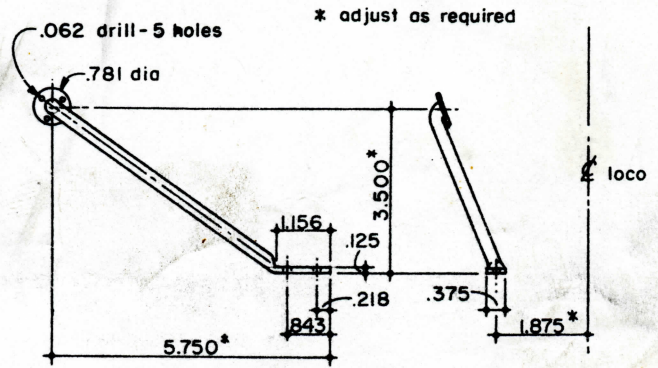