


CAB FLOOR - PLAN
B40 P-7 #5300 1"
I. DANKLIRE 1963

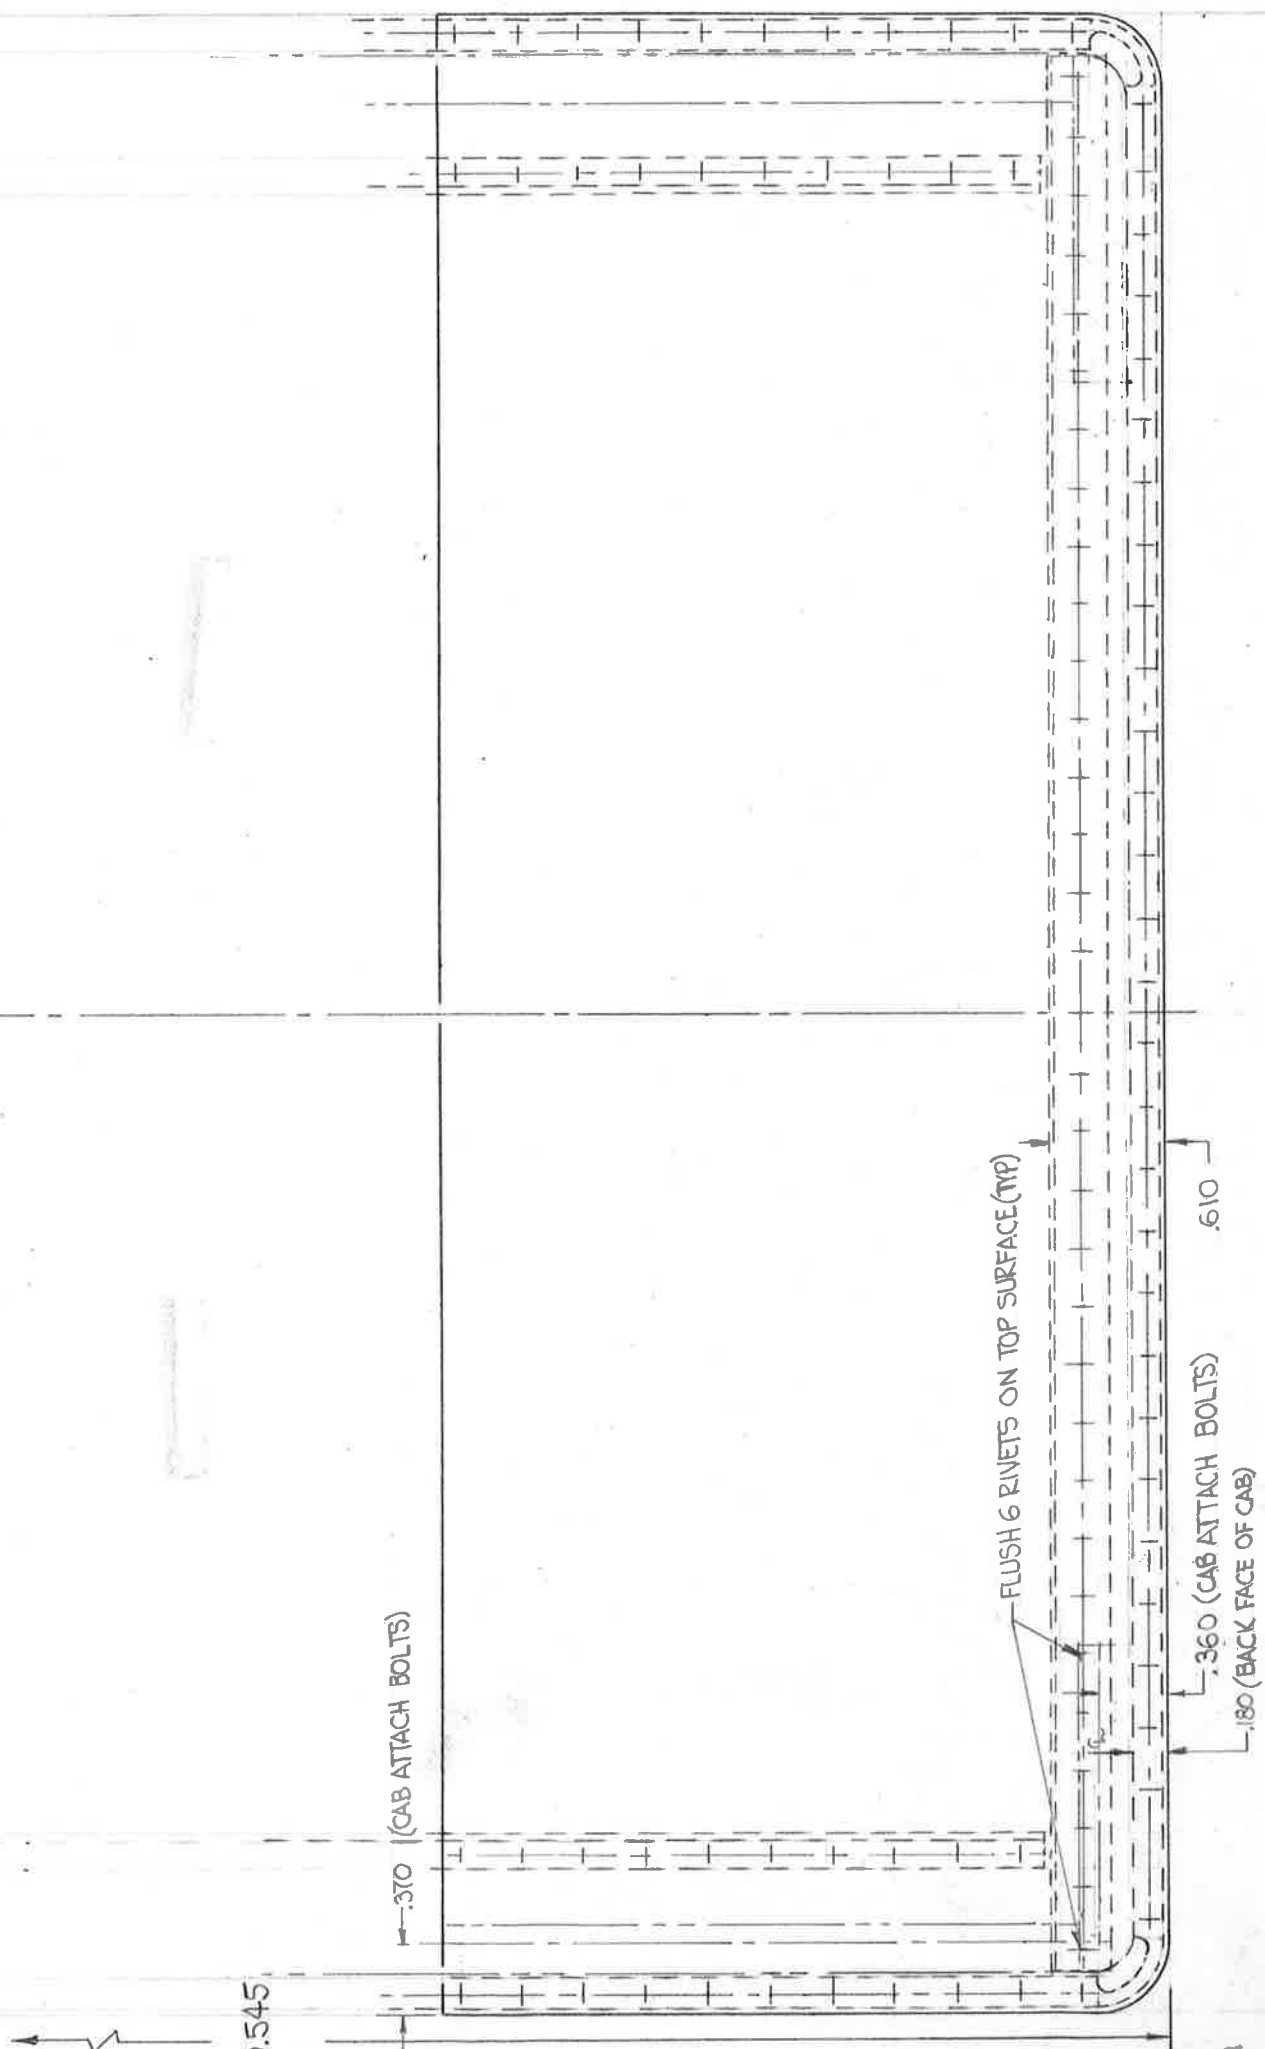

370

370 (CAB ATTACH BOLTS)

FLUSH 6 RIVETS ON TOP SURFACE (TOP)

360 (CAB ATTACH BOLTS)

180 (BACK FACE OF CAB)

610

